




ASSEMBLY INSTRUCTIONS

DINING CHAIR MODEL#:SDC5074-2

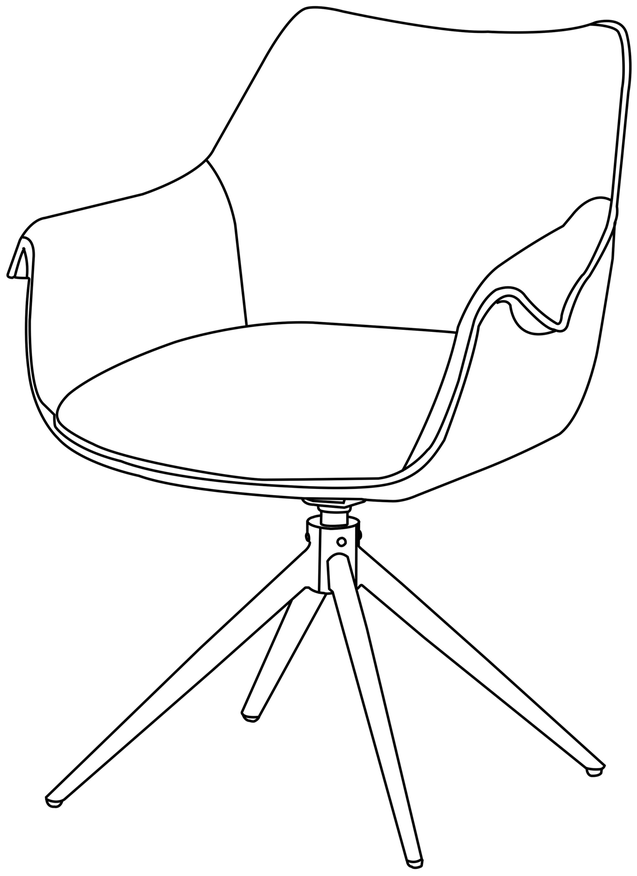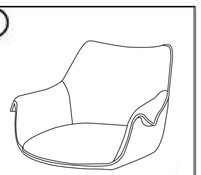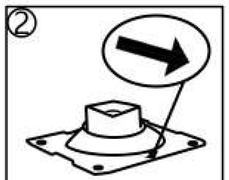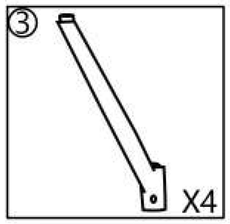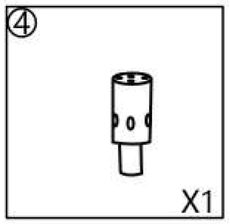


x1


0:10

①  X1	②  X1	③  X4	④  X1
A  6x8MM X8	B  6x18MM X4	C  X4	D  X1

1

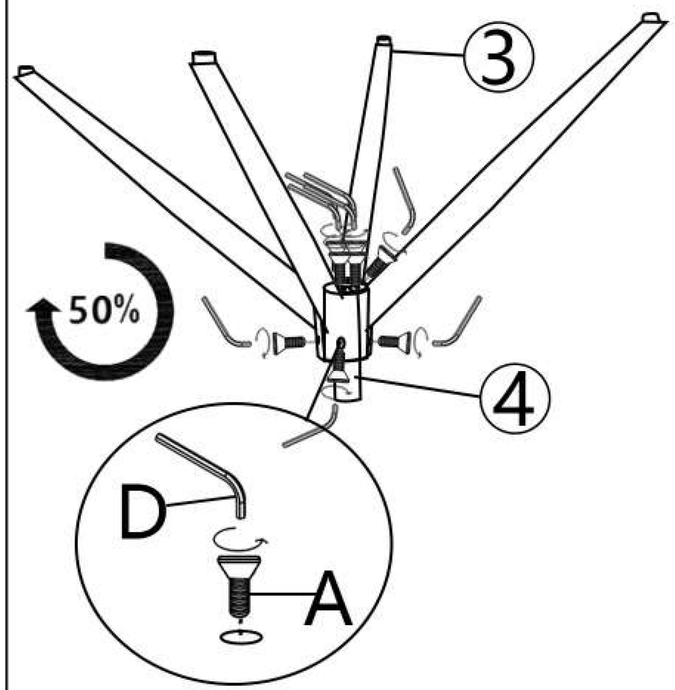


2

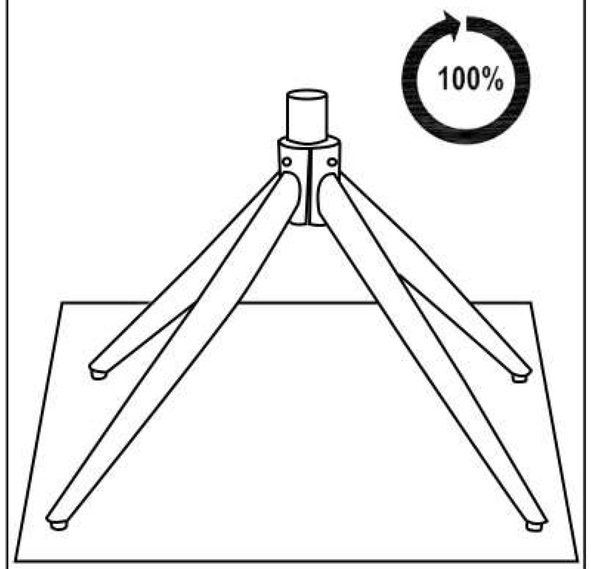

3


Make the plate in the middle and level

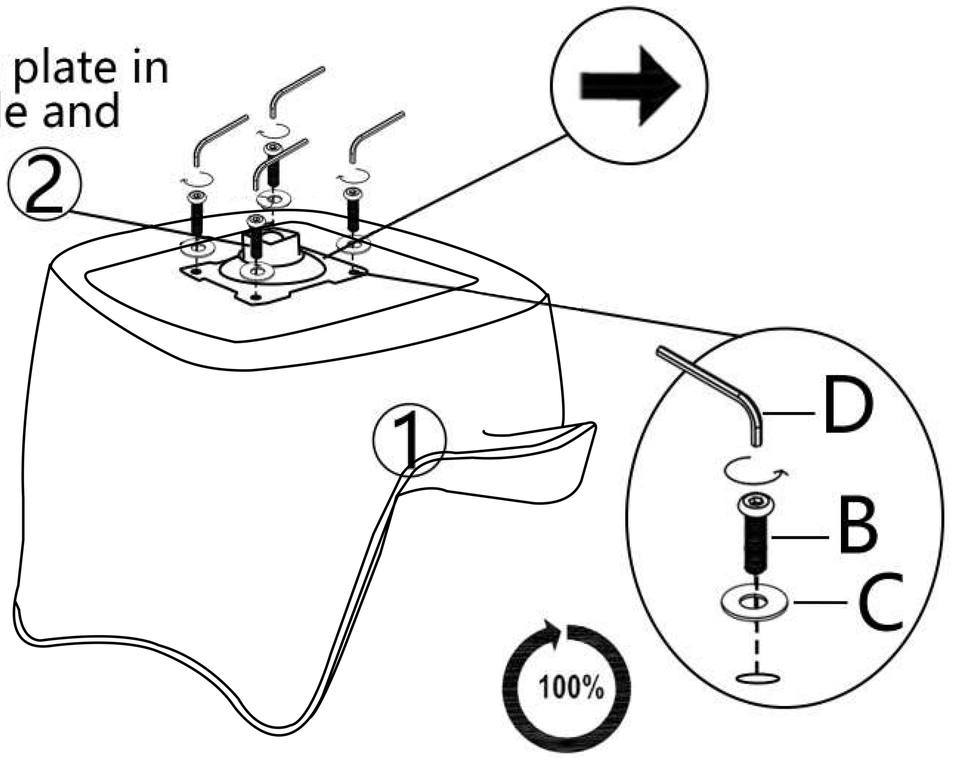


4

Keep Seat and leg all in front


Only Align the assembly holes of the rotating shaft. Don't press it at this step!

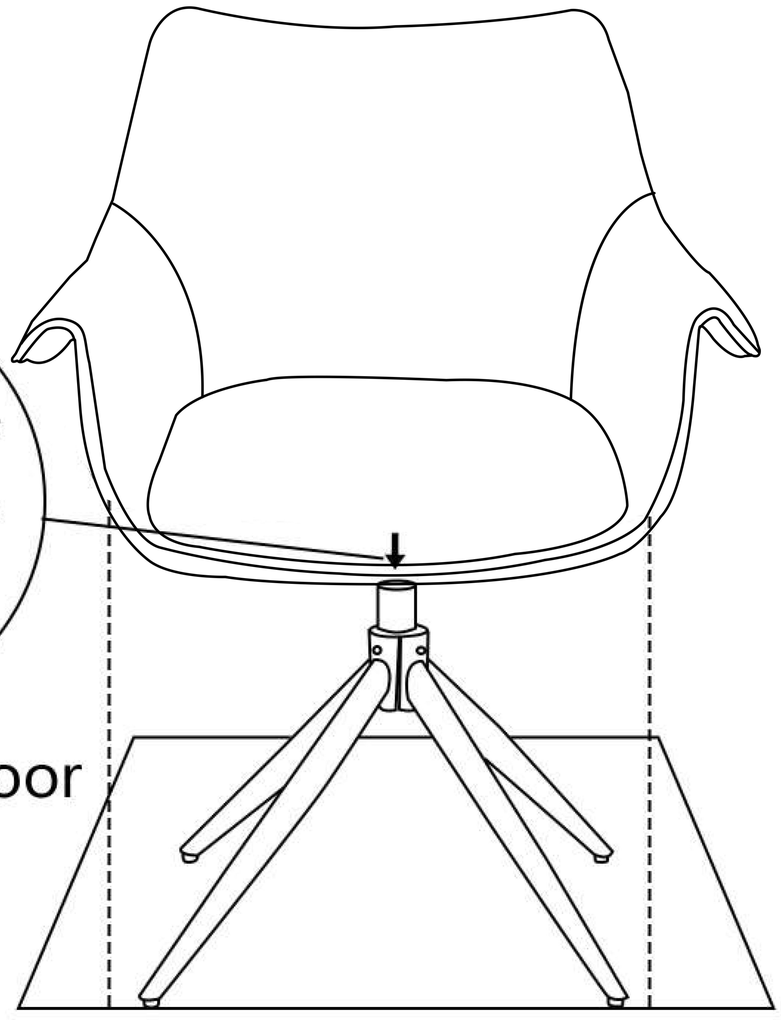

Floor

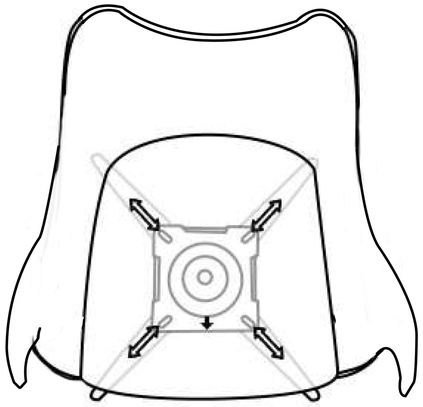


5

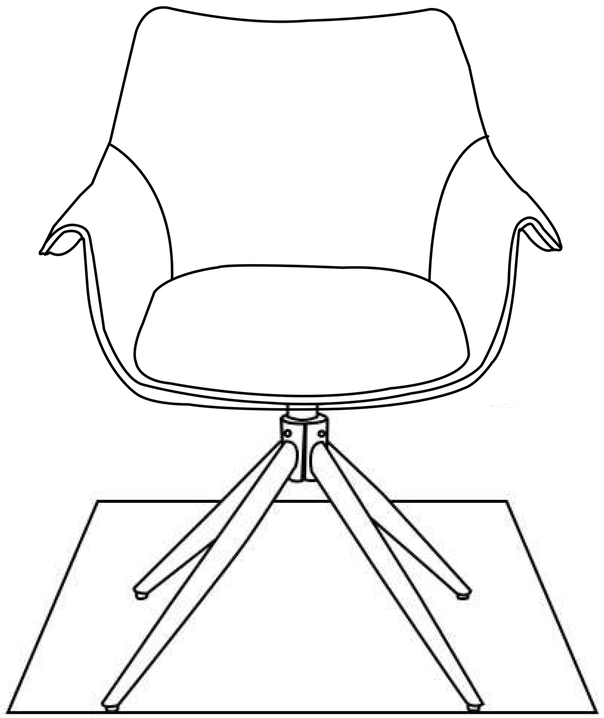

Keep seat and leg in same front level
if not correct ,you can easy unload the seat to adjust

Floor

6

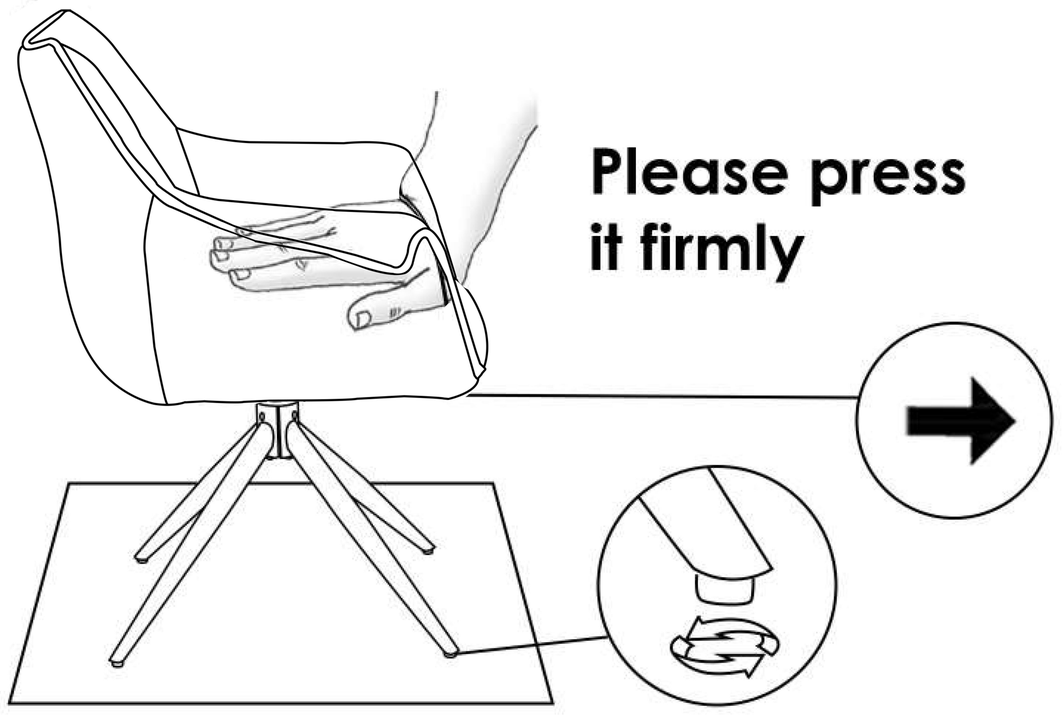

Please press it firmly