
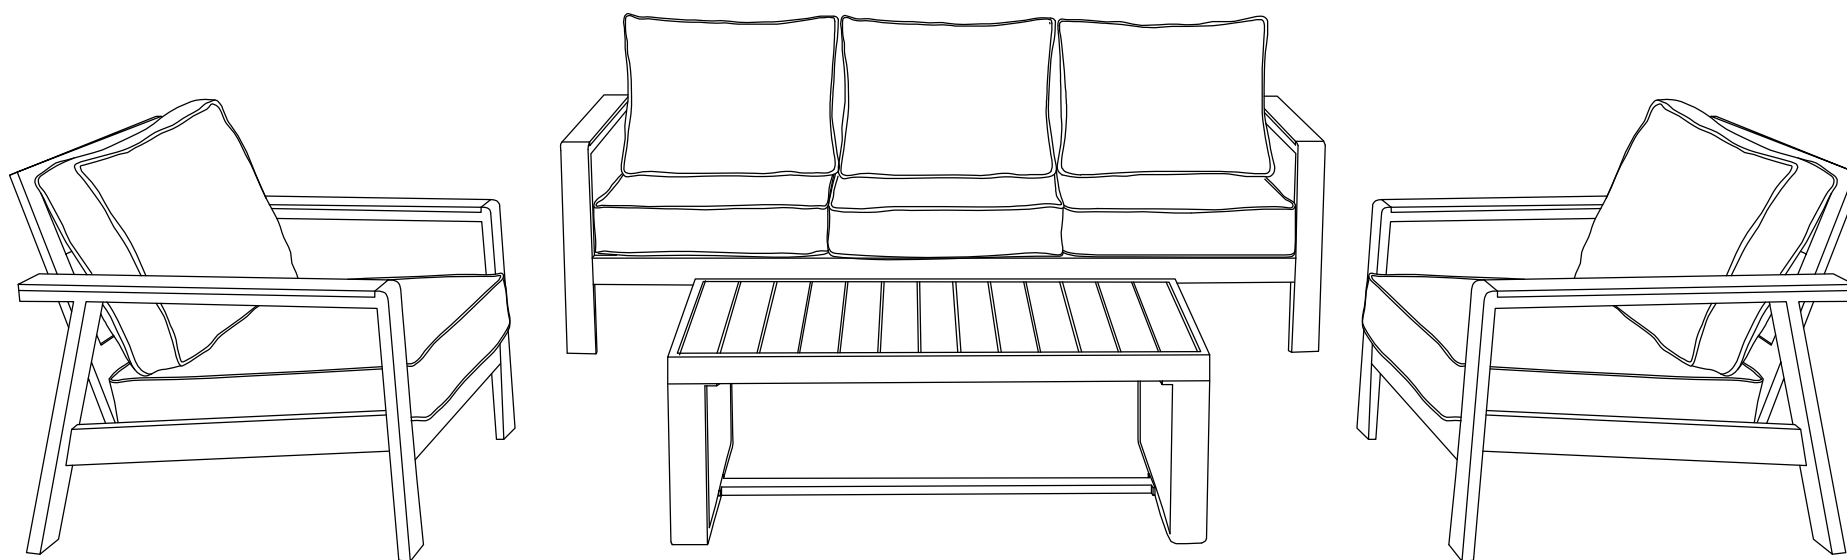
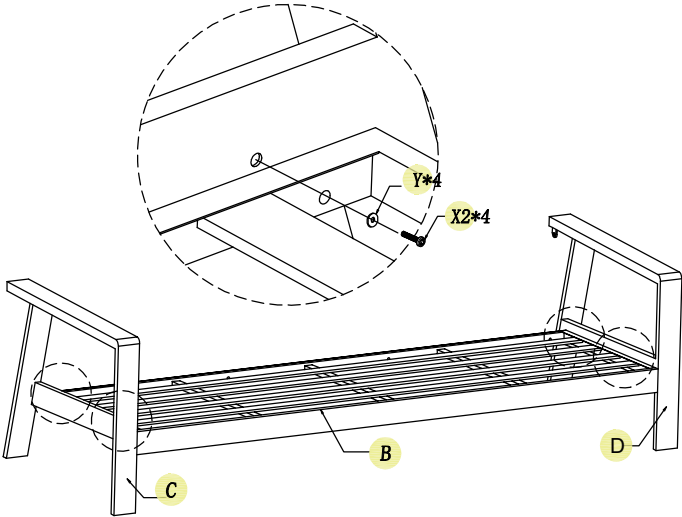
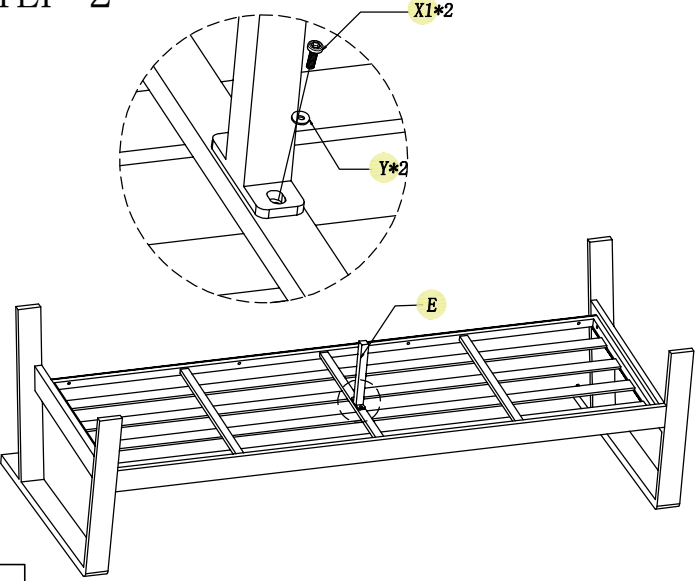



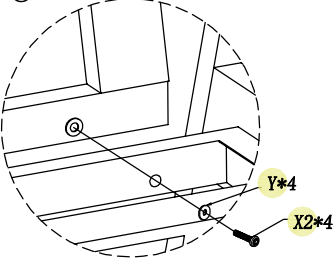
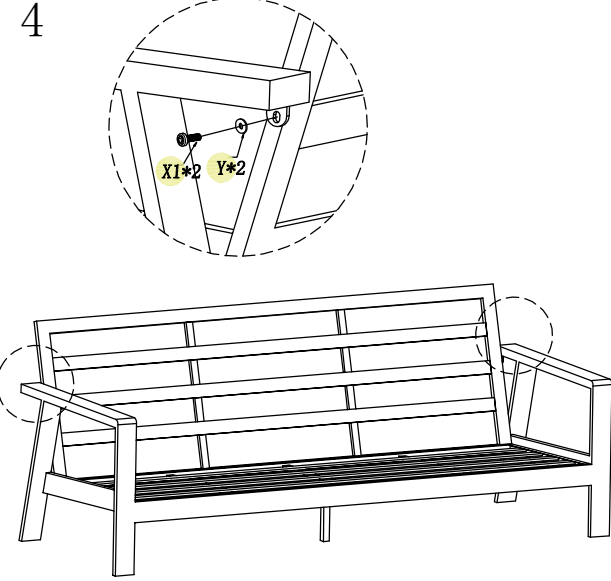

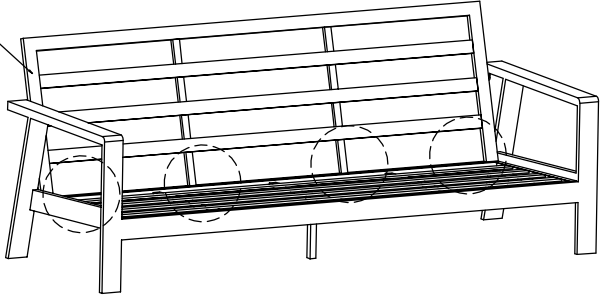
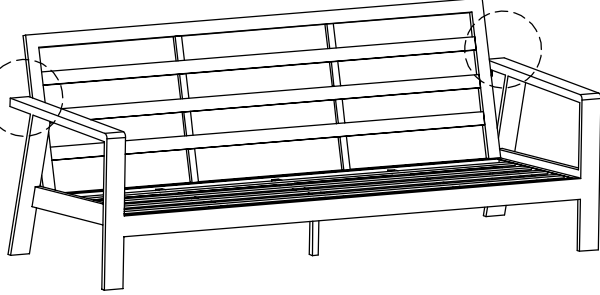

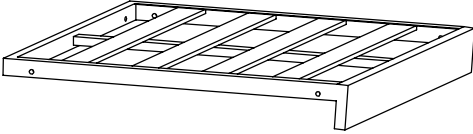
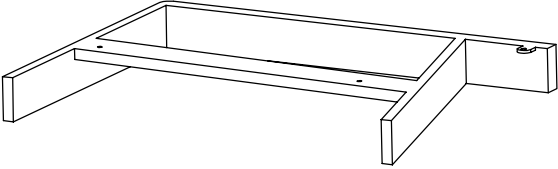
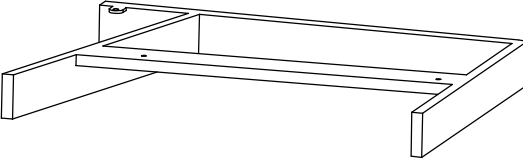
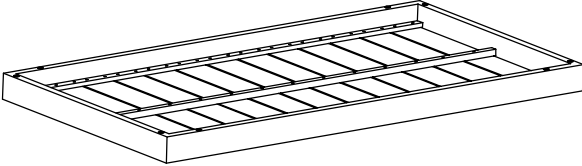
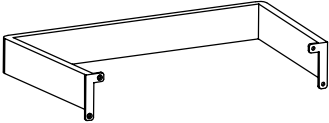
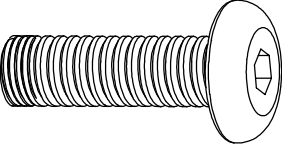
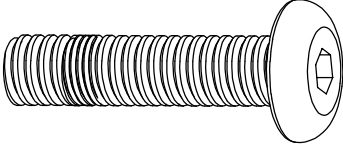



Assembly Instruction

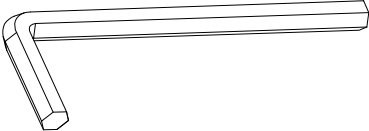


NO.		QTY	STEP 1		STEP 2	
A		1				
B		1				
C		1				
D		1				
E		1				
X1	 M6*20	4	STEP 3 		STEP 4 	
X2	 M6*35	8				
Y		12				
Z		1				
						
			25%  		50%  	
			80%  		100%  	

NO.		QTY	NO.		QTY	NO.		QTY
A		2	B		2	C		2
D		2	E		1	F		2
G		1	X1	 M6*20	16	X2	 M6*35	12
Y		28	Z		1			

STEP 1

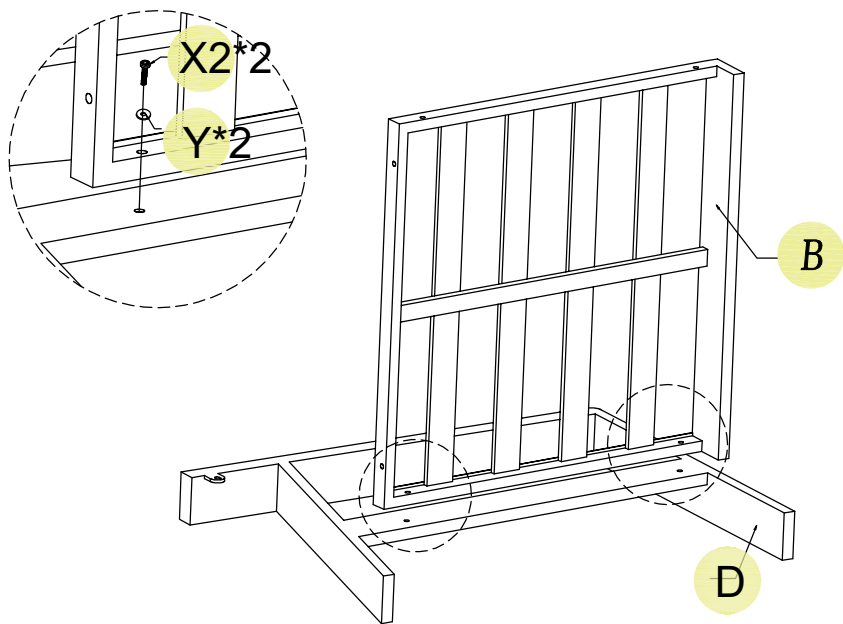

STEP 2

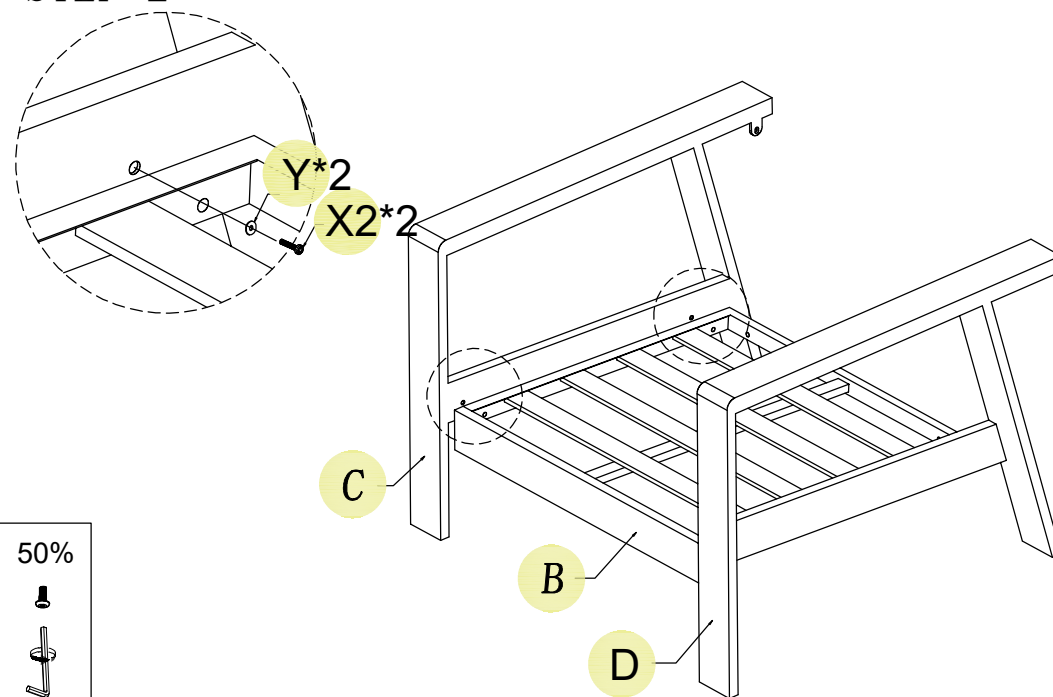


25%




50%



STEP 3

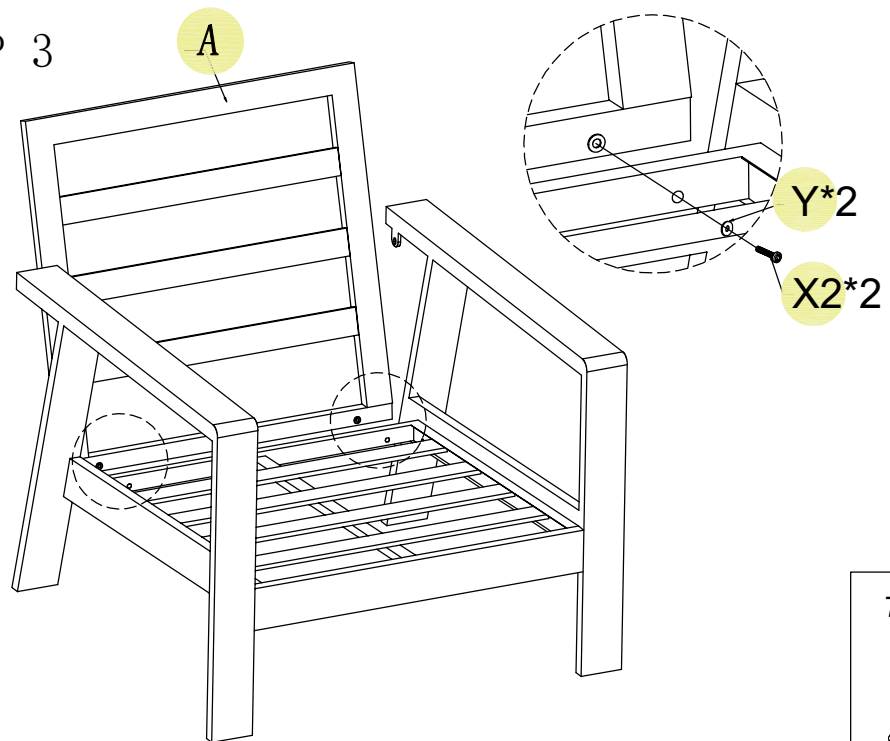

STEP 4

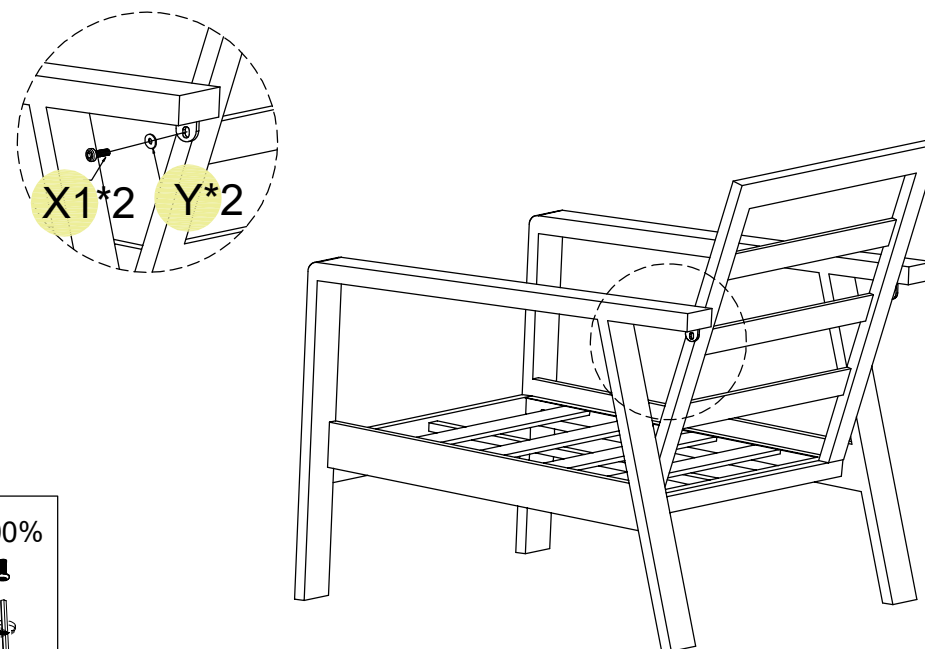



75%



100%





STEP 1

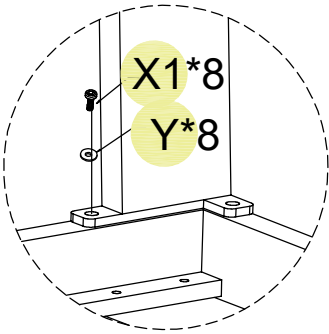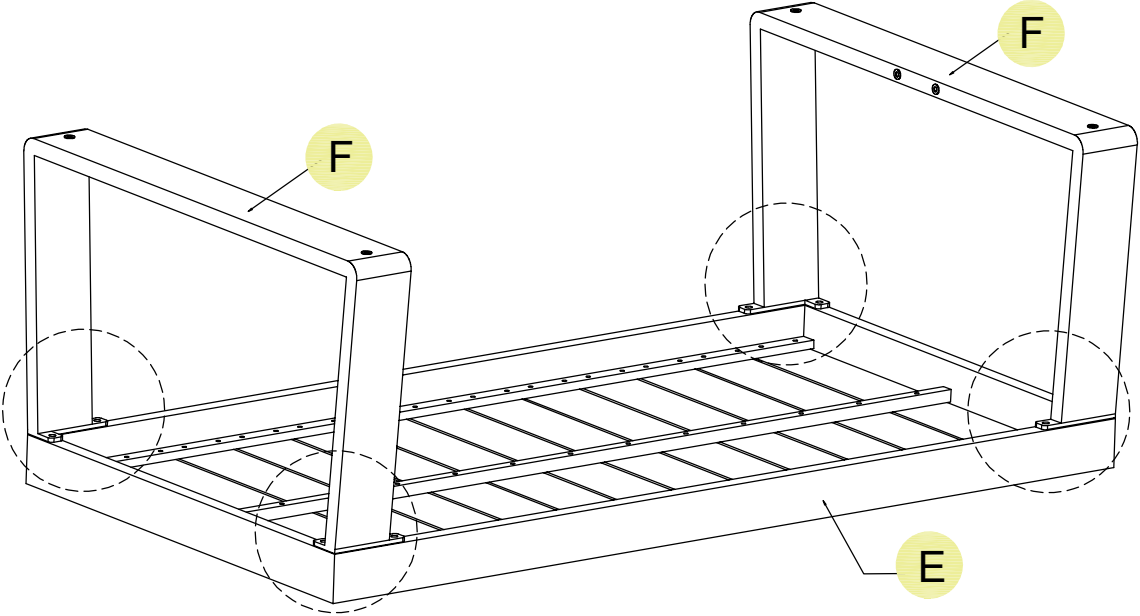

50%



STEP 2

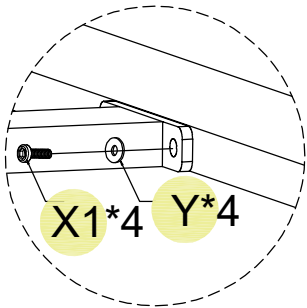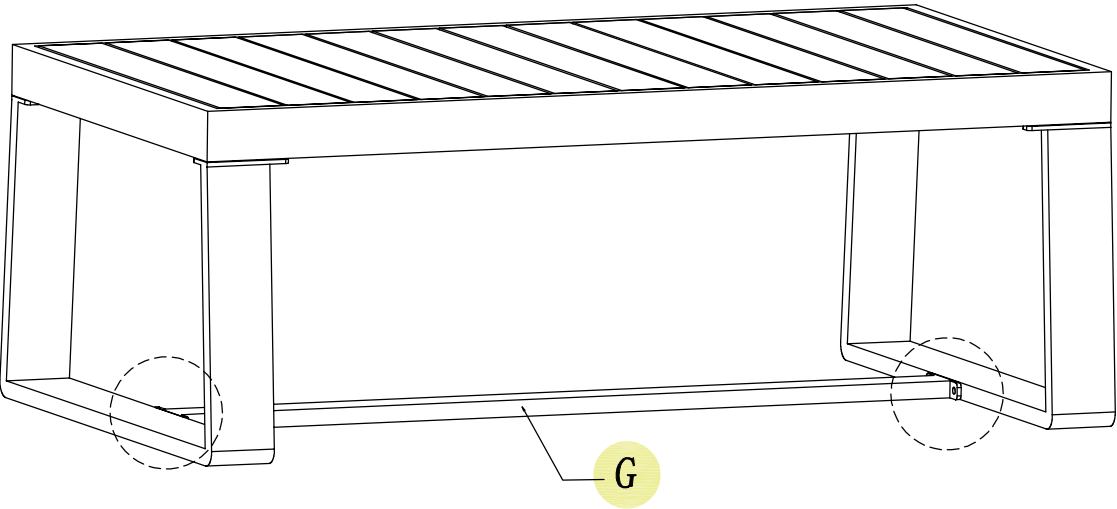

100%

